

Piccolo Heater Guard Installation

INSTALL BRACKETS AND HEATER GUARD BEFORE ADDING ROCKS TO HEATER!


Step 1.

Insert the “s-bend end of bracket into 1st or 2nd hole from the top of the heater shroud as shown at right. (See diagram on next page for desired location of each bracket)



Step 2.

“Weave” through the 1st hole and into the 2nd hole (just below the first hole) as shown to the right.

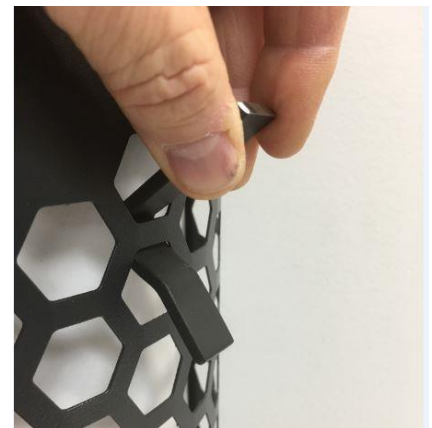

Step 3.


When properly installed the flat part of the bracket with the screw mount hole should sit level as shown at right.



Step 4

Lay the wooden guard on top of the 3 mounting brackets and align so there is an even amount of distance between the heater and the wood guard. Secure with screws as shown at right from below.



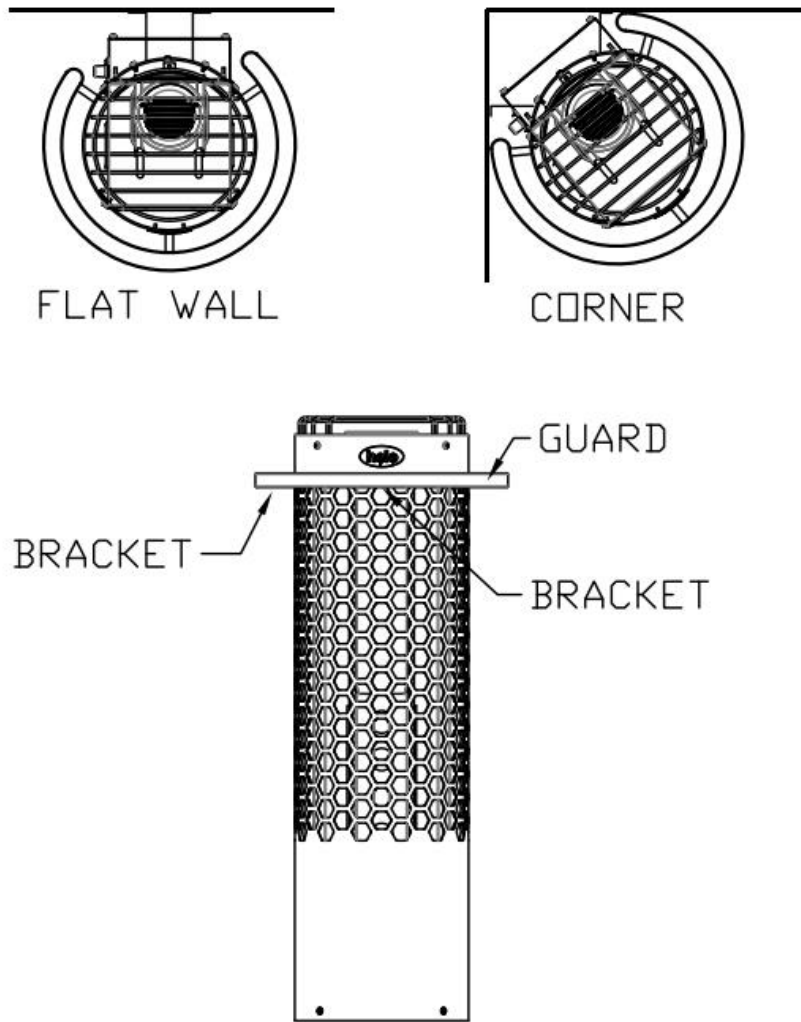

Note: Recommended height for heater guard brackets is 1-2 holes from top of heater.

Wood guardrail will dry and crack over time. It is normal and not considered a warranty issue.

Replacement Part	Replacement Part Number
Wood Heater Guard	7200-008
Piccolo Heater Guard Bracket (3ea)	8201-046
Mounting Screw (3ea)	M3.5 x 15mm SS (n/a pn)

